

## 1207N CMOS

### Industrial Flat Panel Detectors



Superior Image Quality  
with High Resolution for  
Non-Destructive Testing

#### OVERVIEW

Varex Imaging's 1207N CMOS Flat Panel X-ray Detector (FPD) is a high speed, low noise X-ray detector with excellent sensitivity. It employs state-of-the-art large-area CMOS (Complementary Metal-Oxide Semiconductor) image sensor technology and is supplied with a range of scintillator and interface options.

Varex Imaging 1207N Flat Panel X-ray Detector has switchable pixel gain that makes it well suited to real-time imaging and CT as well as static imaging with high dynamic range.

#### FEATURES AND BENEFITS

- 74.8  $\mu\text{m}$  pixel pitch
- 1536 x 864 pixel matrix
- High Sensitivity and High Dynamic Range modes
- Operation up to 160 kV
- Suitable for real-time imaging at up to 191 fps
- 1 x 1, 2 x 2 and 4 x 4 pixel binning options
- High DQE
- Various scintillator options available
- Input/output for X-ray generator synchronization
- Camera Link or GigE Vision data connection

#### APPLICATIONS<sup>1</sup>

- Electronics inspection
- Micro Cone Beam Computed Tomography
- Materials science
- Quality control in automotive, aerospace and electronics manufacturing

## Technical Specifications

### SENSOR

Pixel Size (µm)	74.8	
Sensitive Area (mm <sup>2</sup> )	114.9 × 64.6	
Pixel Matrix (px)	1536 × 864	

### MAX FRAME RATE (FPS)

Pixel Binning	Camera Link	GigE Vision
1×1	60	31
2×2	156	126
4×4	191	191

### IMAGE PERFORMANCE

Dynamic Range (dB)	
High Dynamic Range Mode	typ. 71
High Sensitivity Mode	typ. 68
X-ray Energy Range (kV)	12 - 160

### MECHANICAL

Weight (kg)	1.9
Dimensions l × w × h (mm <sup>3</sup> )	223.5 × 150 × 42

### COMMUNICATIONS

Camera Link	Base 80 Mhz (1 cable)
GigE Vision	1000BASE-T
Digital Output	14-bit
Control Channel	115 kBaud serial link / Camera Link / GigE Vision
Sync Ports	BNC
Sync In Port	3 - 15 V edge or level trigger
Sync Out Port	TTL (0 - 5.0 V)
Software	Support for 32 and 64 bit Windows® OS

### POWER

	Camera Link	GigE Vision
Dissipation	8 W	10.5 W

### SCINTILLATOR OPTIONS

High Efficiency microcolumnar CsI
High Resolution microcolumnar CsI
Various Gd <sub>2</sub> O <sub>2</sub> S:Tb (GOS) fluorescent screens

### TEMPERATURE RANGE


Operating Temperature	+10°C to +40°C
Storage Temperature	-10°C to +50°C

### ACCESSORIES

	Camera Link	GigE Vision
Power Supply Type	PSU-3A	
Power Cable	3 m Lemo Low Voltage	
Power Supply Input	50 - 60 Hz, 100-240 VAC	
Power Supply Output	24 V	
Network Interface Card	EPIX EB1	Intel I210-T1

## MECHANICAL CHARACTERISTICS

(Dimensions in mm)

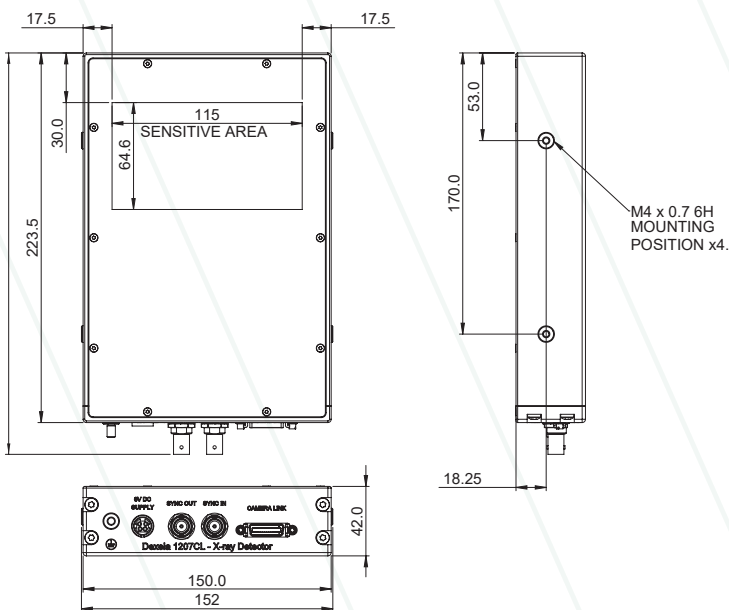

<sup>1</sup> Unless otherwise specified, Varex Imaging Flat Panel X-ray Detectors are components intended to be integrated into products by X-ray system manufacturers. System manufacturers are responsible for qualifying and validating their products for their intended uses and meeting all applicable regulatory requirements.

Contents in this document are subject to change without notice.

## Varex Imaging Corporation

USA

HEADQUARTERS  
Salt Lake City, UT  
P: +1-801-972-5000

Germany  
Walluf  
P: +49-6123-971-300

China  
Wuxi  
P: +86 510 8592-9201

For a complete listing of our global offices,  
visit [www.vareximaging.com](http://www.vareximaging.com)

©2019 Varex Imaging Corporation. All Rights reserved. Production of any of the material contained herein in any format or media without the express written permission of Varex Imaging Corporation is prohibited.